


Heated seats (m.y. 1995)**Relay locations**


Position of relays and multi-pin connector wiring, see also "Component Locations" section.

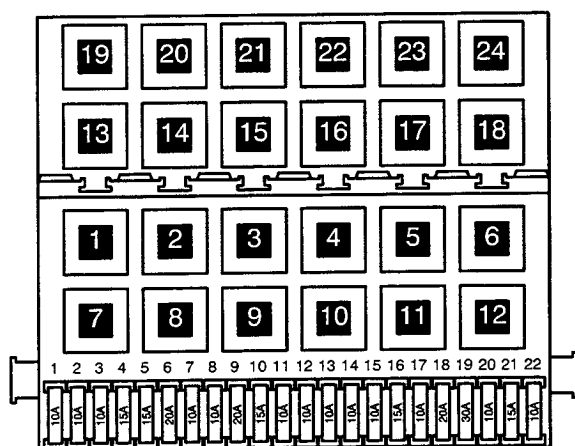

97-3000

Fuse colors

- 30A — green
- 25A — white
- 20A — yellow
- 15A — blue
- 10A — red

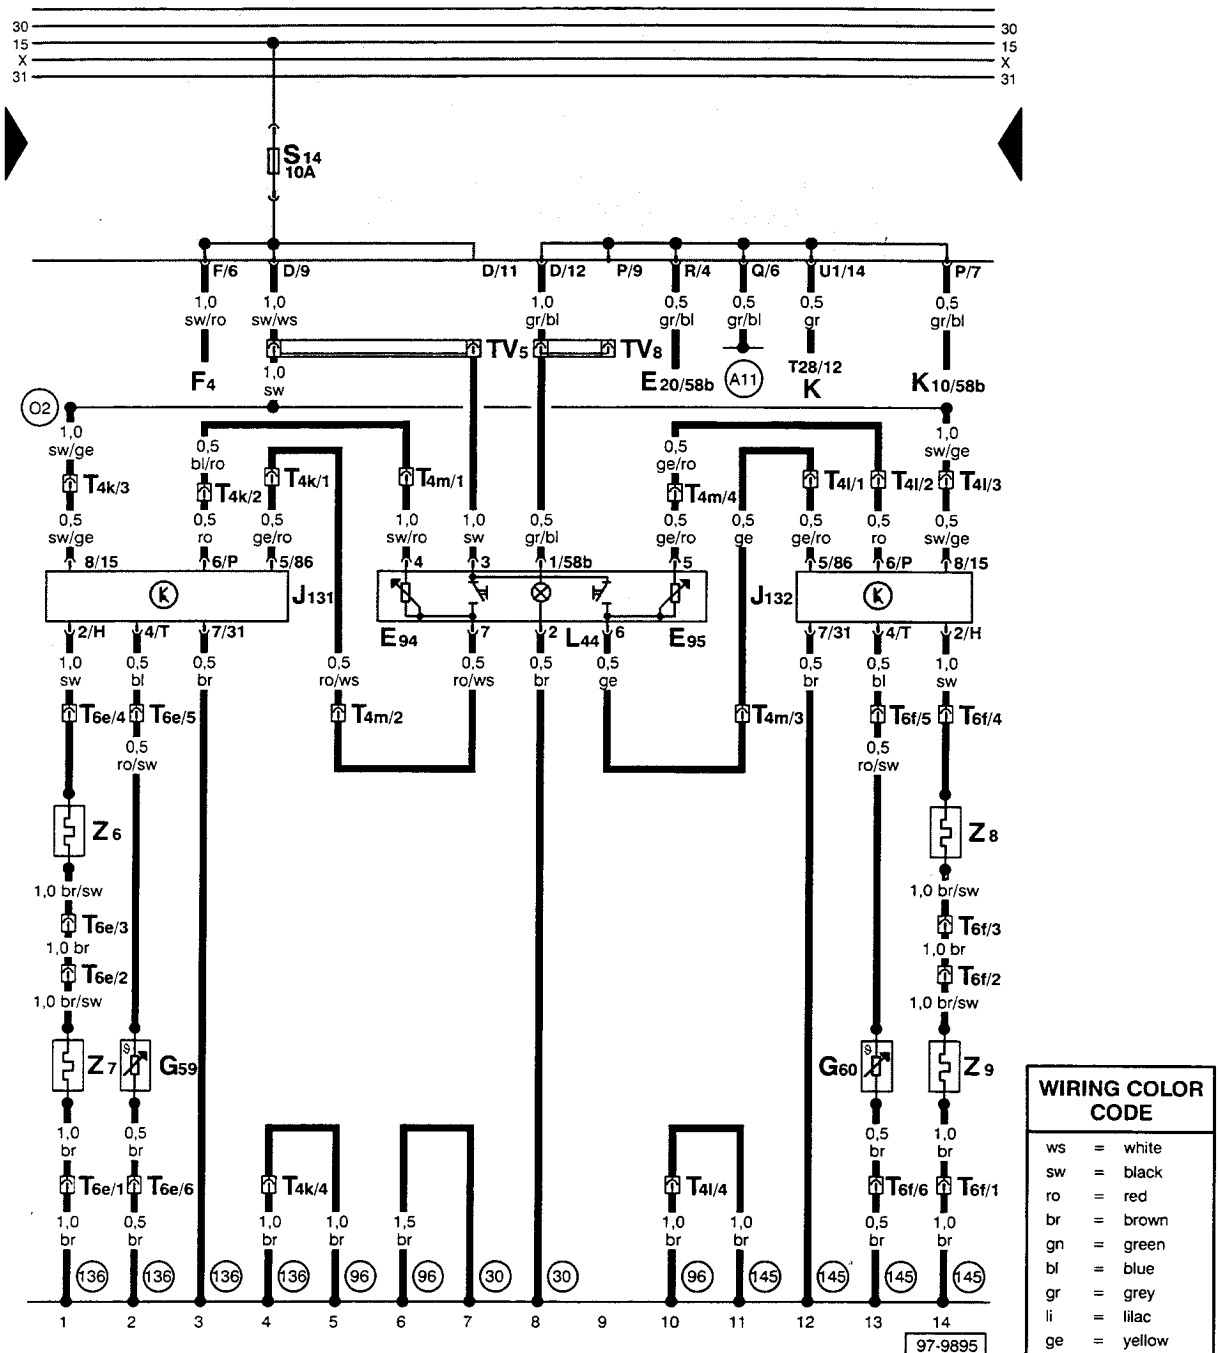

- E20 – Instrument Panel Light Dimmer Switch
- E94 – Driver's Seat Heat Regulating Switch
- E95 – Passenger's Seat Heat Regulating Switch
- F4 – Back-Up Light Switch
- G59 – Driver's Seat Heater Temperature Sensor
- G60 – Passenger's Seat Heater Temperature Sensor
- J131 – Driver's Seat Heater Control Module
- J132 – Passenger's Seat Heater Control Module
- K – Instrument Cluster
- K10 – Rear Window Defogger Indicator Light
- L44 – Seat Heater Switch Illumination Light
- T4k – 4-Pin Connector
- T4l – 4-Pin Connector
- T4m – 4-Pin Connector
- T6e – 6-Pin Connector
- T6f – 6-Pin Connector
- T28 – 28-Pin Connector, on instrument cluster
- TV5 – Terminal 15a Wire Connector

- TV8 – Terminal 58b Wire Connector
- Z6 – Driver's Seat Heat Element
- Z7 – Driver's Backrest Heat Element
- Z8 – Passenger's Seat Heat Element
- Z9 – Passenger's Backrest Heat Element
- (30) – Ground connection –1–, beside fuse/relay panel
- (96) – Ground connection –1–, in heated seats wiring harness
- (136) – Ground connection –2–, in heated seats wiring harness
- (145) – Ground connection –3–, in heated seats wiring harness
- (A11) – Plus connection (58b), in instrument panel wiring harness
- (O2) – Plus connection (15) in heated seats wiring harness