



56 rotating LEDs instruction


We already download the hex file when delivery, so if you do not want to do it again, you can ignore blow step 1.

1. Install usb module driver:


①. If you purchase our module which use usb com turn to serial port device, please install the module driver first. Steps as follow:



②. After finish install, Insert the module to the computer usb com, and other side link to dupont line.

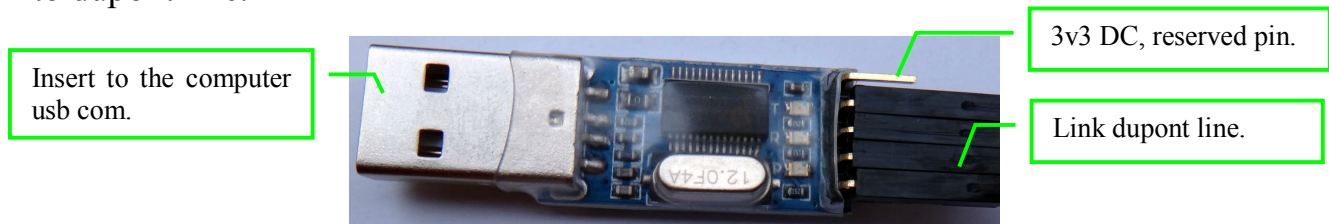


③. Then you can check the result in your computer task manager, show as below:

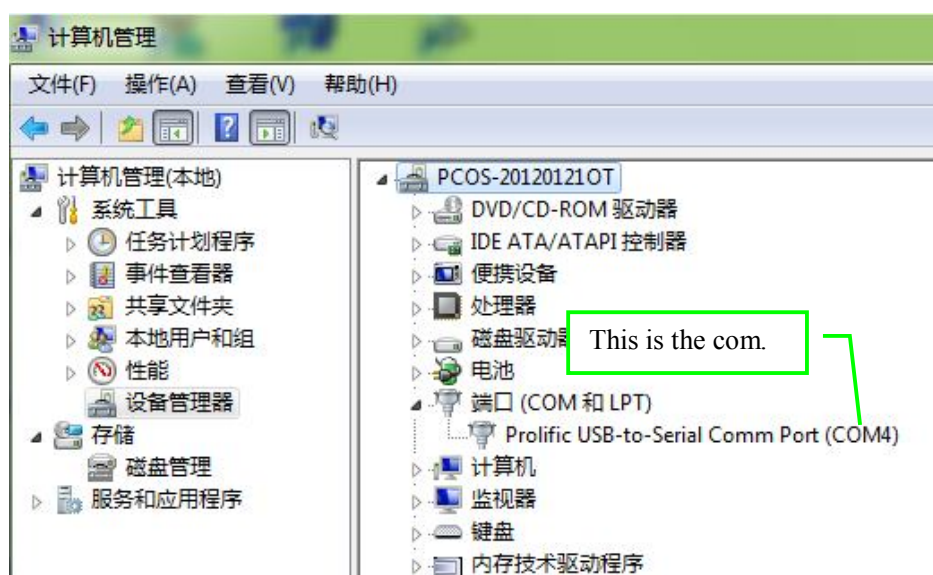



④. Link the module with the main board com.

Attention: Wrong link will damage the download com and can not download again.

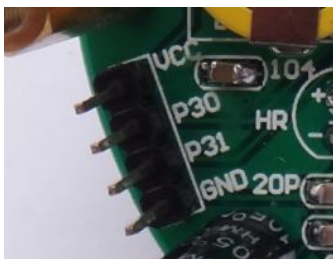

Module com	Main board com
5V	VCC
GND	GND
RXD	P31
TXD	P30

2. Use PC software to update pictures and text:


①. Open the software, show as below:






②. If you can not open the soft ware, please install dotnet platform.




③. After open the software you will see as below:

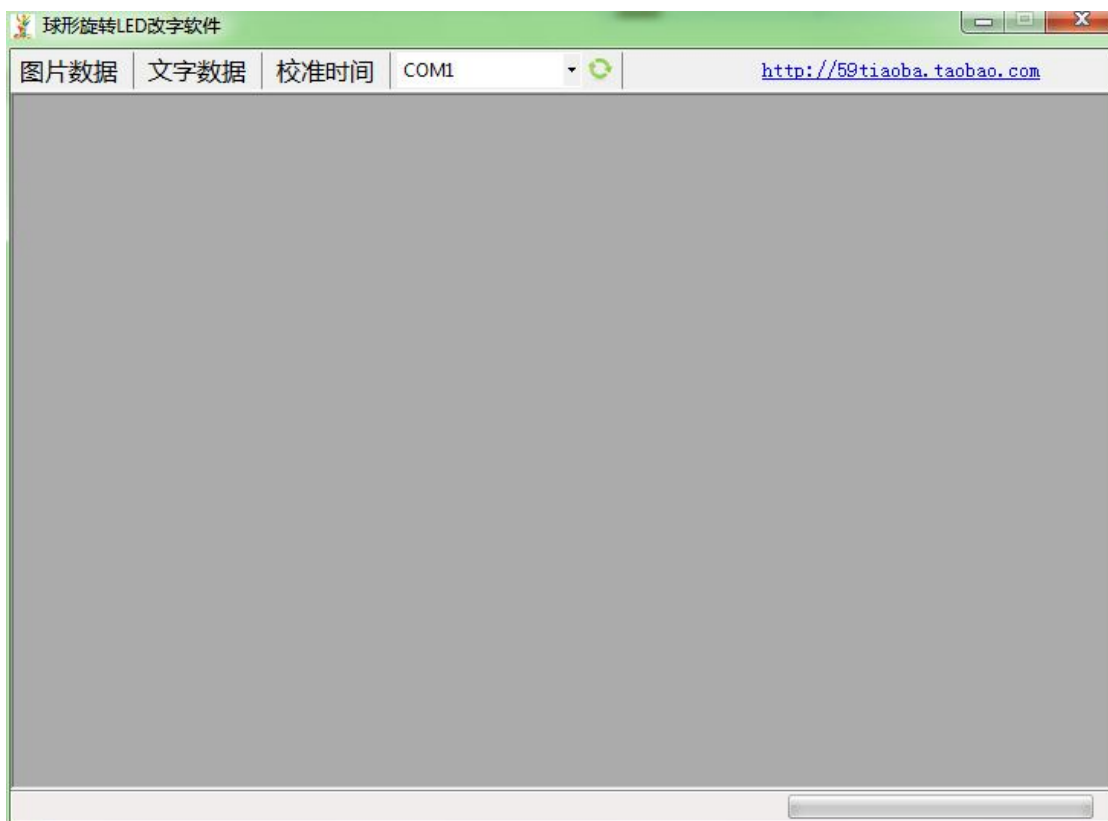

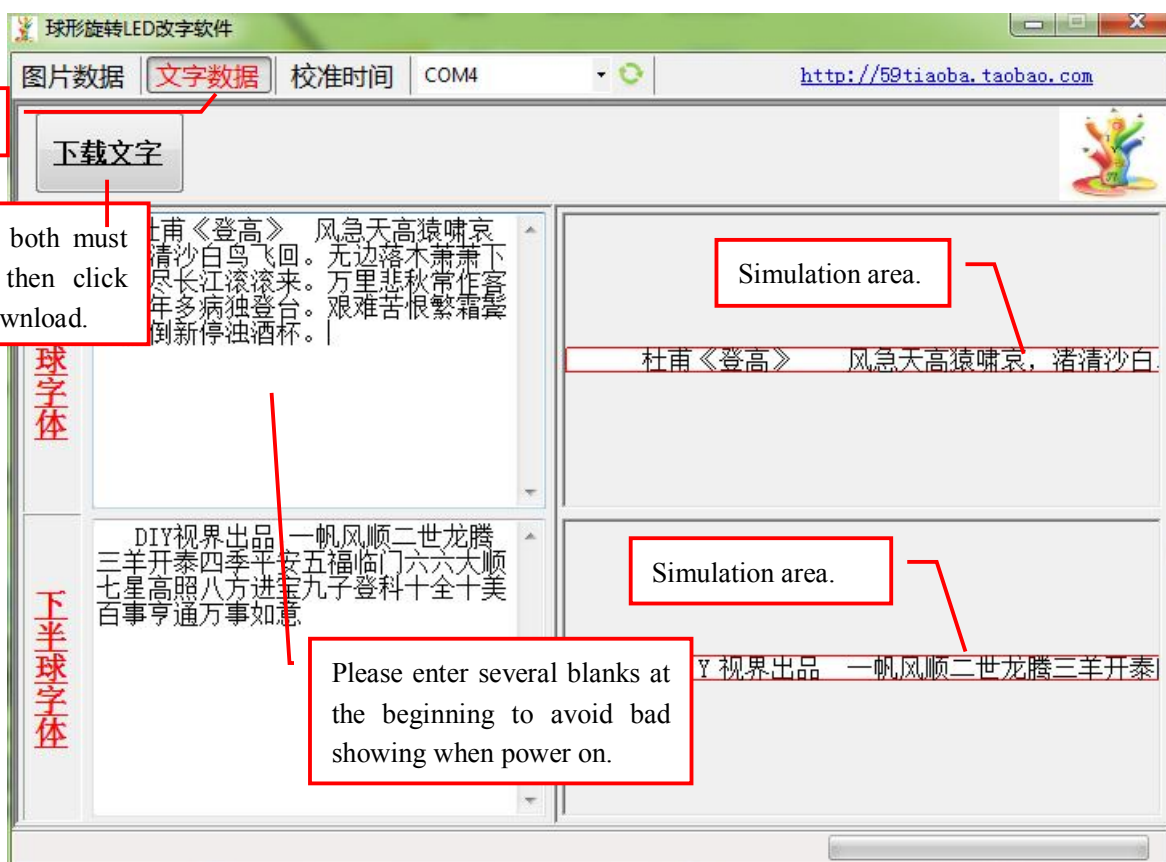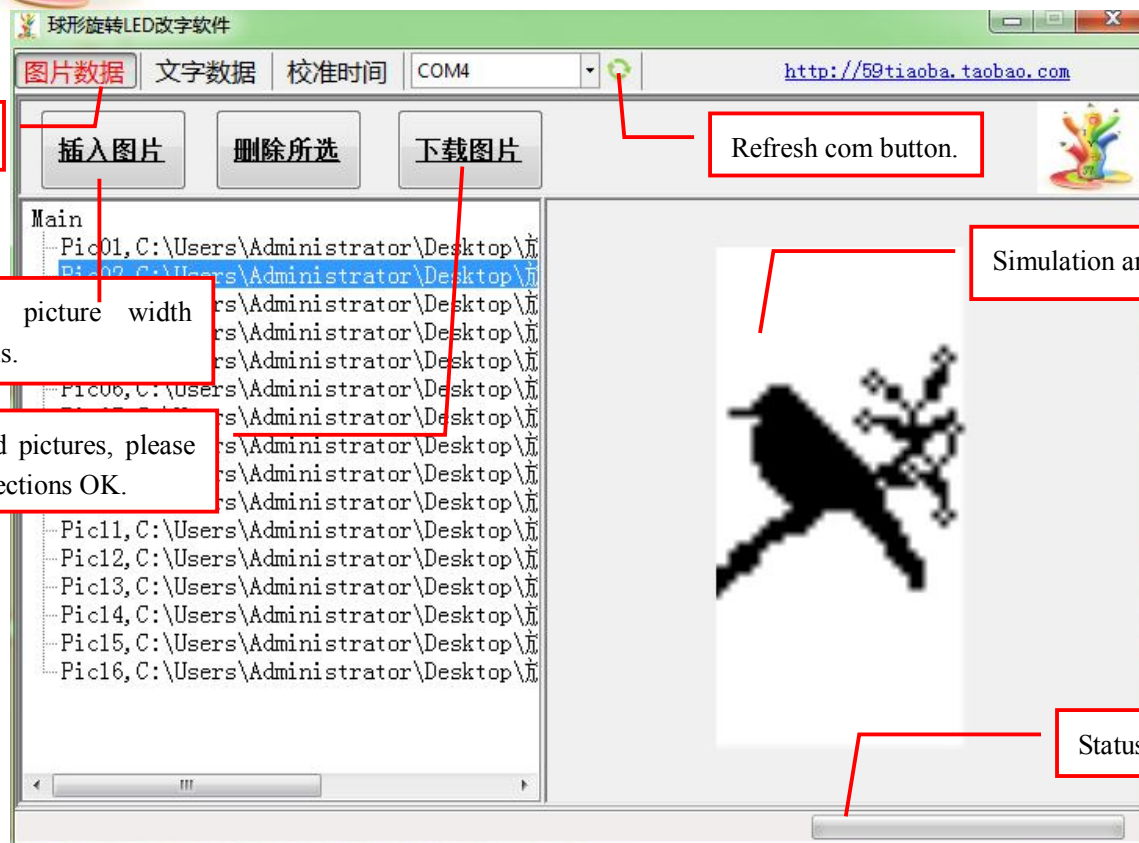

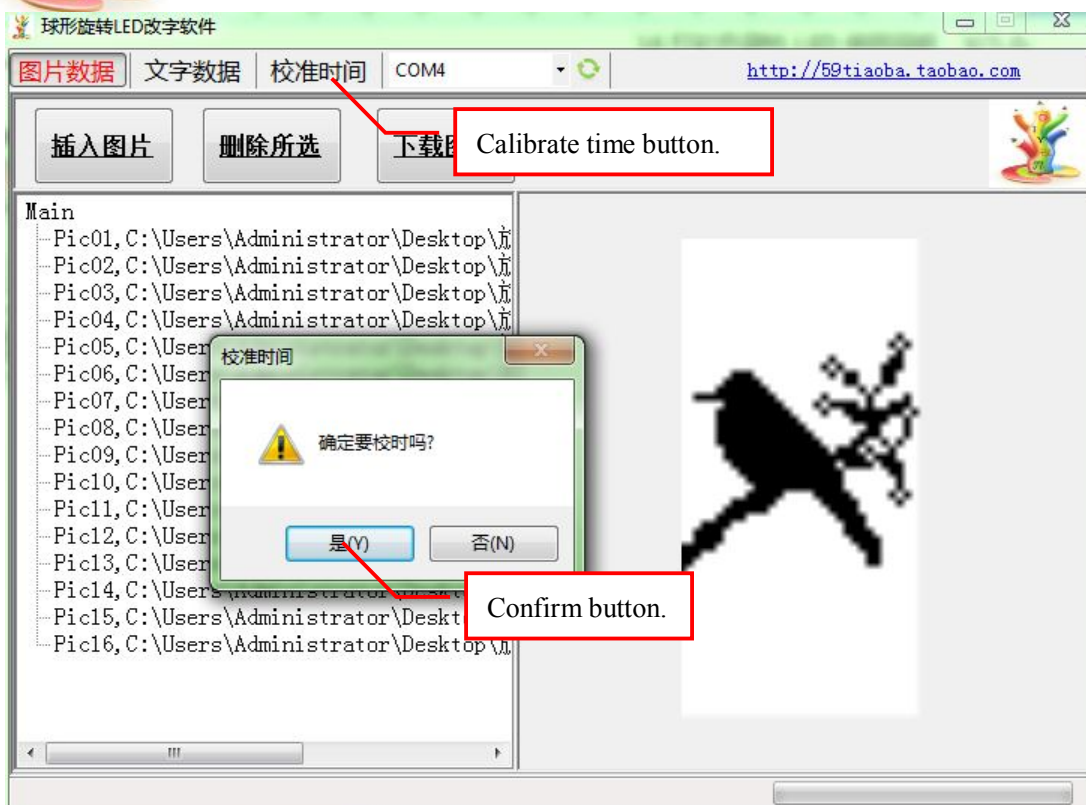

3. remote using instruction: (no remark not available)

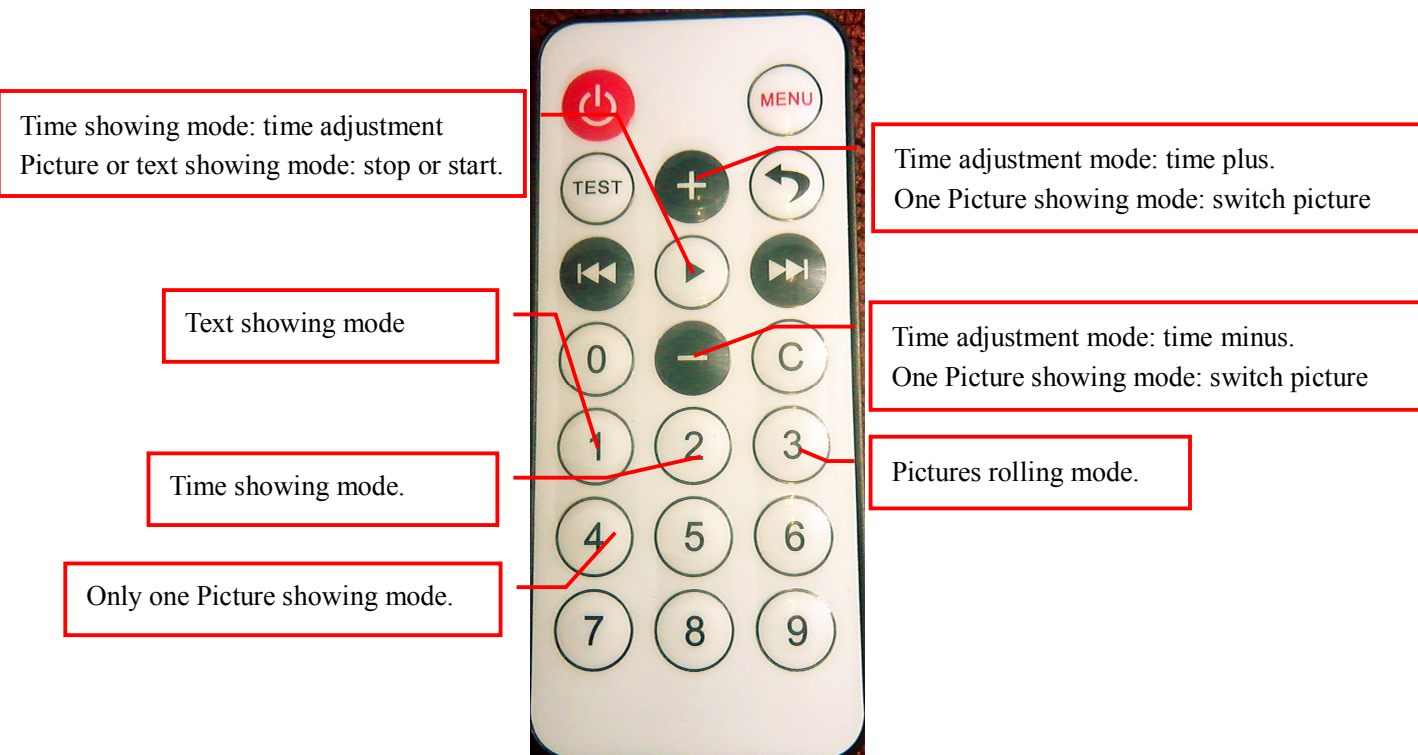



I wish all users can do this successfully and learn the related knowledge, make learning value beyond the product. If you have any questions about this instruction, please feel free to contact us through wangwang online, thanks for your great support!